




# MOUNTING INSTRUCTION

## Compensating wall penetration Seal type VDW


Wall/ceiling and casing pipe have to be dry, dust and grease-free at the mounting area of the compensating wall penetration seal type VDW.

1. Center and store casing pipe to core drilled hole.


2. Mark bore hole with help of pressure plate at the wall/ceiling. Drill out of center and insert dowel.

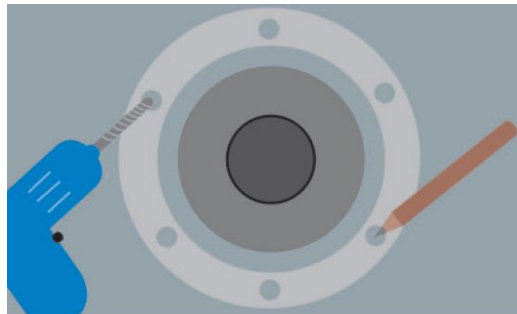


3. Apply sealant like showed on wall/ceiling.

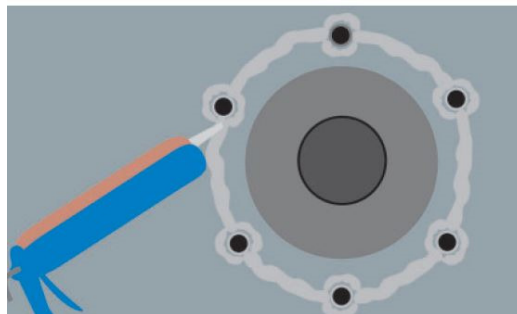

4. Pull open side (at the flange) of the compensating wall penetration seal type VDW over the casing pipe. Warp compensating wall penetration seal type VDW with pressure plate against the wall/ceiling. Spread oozed sealant.

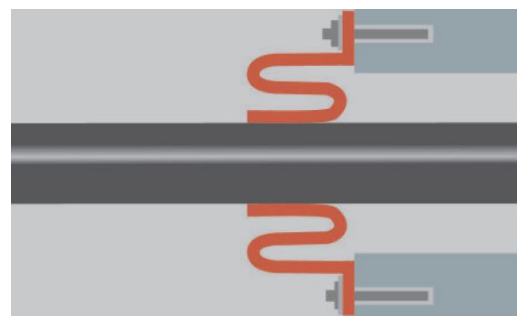

5. You have to apply lubricant to the casing end seal under the warp strap. Inject sealant under collar circularly and warp strap closely.

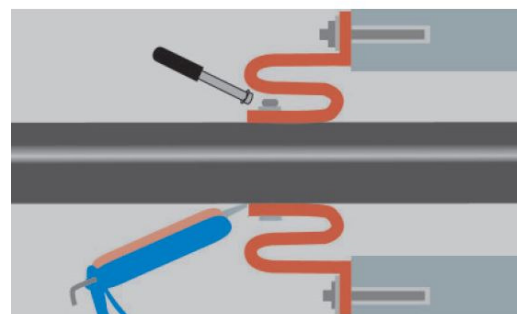

For laying underground the compensating wall penetration seal has to be covered with a stretching cushion before filling to prevent compensating wall penetration seal of earth burden. This allows the movement of the compensating wall penetration seal.

Technocal modifications reserved